

Spare part list for EX-HGX22e/160-4 S (up to DK 056)

Position	Item No.	Description	Quantity
1520	80940	SET-ANTI-VIBRATION PADS *EX	1 pc
1999		----- ASSEMBLY KITS -----	1 pc
2000	08862	SET-VALVE PLATE *EX	1 pc
2020	08864	SET-OIL PUMP *EX	1 pc
2060	80378	SET-SHUT-OFF VALVE ø16/SOLD*EX	1 pc
2070	08784	SET-SHUT-OFF VAL.ø22/SOLD *EX	1 pc
2080	08855	SET-SIGHT GLASS ø22 *EX	1 pc
2090	80360	SET-GASKETS *EX NOT SHOWN	1 pc
2110	80776	SET-REAR BEARING FLANGE *EX	1 pc
2220	80786	SET-OIL STRAINER *EX	1 pc
2800	08860	SET-THERM PROT.TH.1/8"NPTF *EX	1 pc
2900	08618	SET-GASKETS F.OIL DRAIN *EX	1 pc
2980	08865 80577	SET-MOT.PROT.MP10,AC 230V *EX SET-MOTOR PROT.MP10,DC 24V *EX NOT SHOWN	1 pc 1 pc
2990	08866	SET-AC-DOUBLE BARRIER *EX	1 pc
2999		----- ACCESSORIES -----	1 pc
3950	80881	SET-OILS.HEAT. 80W 230V AC *EX	1 pc
3999	02279 02280 02281 02282 02283 02284	REFR.MACH.OIL SP46 / 1 LTR.CAN REFR.MACH.OIL SP46 / 5 LTR.CAN REFR.MACH.OIL SP46 /20 LTR.CAN NOT SHOWN ONLY FOR R22-COMPRESSORS ! REFR.MACH.OIL SE55 / 1 LTR.CAN REFR.MACH.OIL SE55 / 5 LTR.CAN REFR.MACH.OIL SE55 /10 LTR.CAN NOT SHOWN ONLY FOR X-COMPRESSORS !	1 pc 1 pc 1 pc 1 pc 1 pc 1 pc
4000		PLEASE NOTE: ONLY PARTS SHOWN IN THE SPARE PARTS LIST ARE AVAILABLE AS SPARE PART. ALL OTHER MAINTENANCE WORK HAS TO BE DONE BY THE MANUFACTURER!	1 pc