

Spare part list for EX-HGX4/465-4 S

Position	Item No.	Description	Quantity
1520	08870	SET-ANTI-VIBRATION PADS	1 pc
1999		----- ASSEMBLY KITS -----	1 pc
2000	80391	SET-VALVE PLATE *EX	2 pc
2020	80389	SET-OIL PUMP F.DELTA-P SW. *EX	1 pc
2060	80428	SET-SHUT-OFF VALVE NS25(AL)*EX	1 pc
2070	80429	SET-SHUT-OFF VALVE NS32(AL)*EX	1 pc
2080	80388	SET-SIGHT GLASS ø62 *EX	1 pc
2090	80385	SET-GASKETS *EX NOT SHOWN	1 pc
2220	80382	SET-OIL STRAINER *EX	1 pc
2800	08860	SET-THERM PROT.TH.1/8"NPTF *EX	2 pc
2980	80426 80578	SET-MOTOR PROT.MP10,AC 230V*EX SET-MOTOR PROT.MP10,DC 24V *EX NOT SHOWN	1 pc 1 pc
2990	80427	SET-AC-DOUBLE BARRIER *EX	1 pc
2999		----- ACCESSORIES -----	1 pc
3305	81150 81158 81154	SET-CAP.REG.CR87 230V AC *EX SET-CAP.REG.CR87 24V DC *EX SET-CAP.REG.CR87 110V AC *EX FOR ADMISSION TPS 06 ATEX 1230 X TPS 13 ATEX 55283 007 X	1 pc 1 pc 1 pc
3310	80518	SET-VALVE BODY CR87 *EX	1 pc
3320	81147 81155 81151	SET-SOLENOID COIL 230V AC *EX SET-SOLENOID COIL 24V DC *EX SET-SOLENOID COIL 110V AC *EX FOR ADMISSION TPS 06 ATEX 1230 X TPS 13 ATEX 55283 007 X	1 pc 1 pc 1 pc
3700	80516	SET-OIL PRESS.SENSOR/INT *EX	1 pc
3710	81634	SET-SWITCHING REPEATER EX i	1 pc
3720	80553	SET-INT SWITCH PART+SCREW. *EX	1 pc
3800	08860	SET-THERM PROT.TH.1/8"NPTF *EX	1 pc
3950	80496 80970	SET-OILS.HEAT. 80W 230V AC *EX SET-OILS.HEAT. 80W 120V AC *EX SPECIAL VERSION	1 pc 1 pc
3999	02524 02525 02520 02521 02522	OIL BOCKLub A46 / 1 LTR.CAN OIL BOCKLub A46 / 5 LTR.CAN NOT SHOWN ONLY FOR R22-COMPRESSORS ! OIL BOCKLub E55 / 1 LTR.CAN OIL BOCKLub E55 / 5 LTR.CAN OIL BOCKLub E55 / 10 LTR.CAN NOT SHOWN ONLY FOR X-COMPRESSORS !	1 pc 1 pc 1 pc 1 pc 1 pc
4000		PLEASE NOTE: ONLY PARTS SHOWN IN THE SPARE PARTS LIST ARE AVAILABLE AS SPARE PART. ALL OTHER MAINTENANCE WORK HAS TO BE DONE BY THE MANUFACTURER!	1 pc

