

Spare part list for SHAX22P/160-4 RU

Position	Item No.	Description	Quantity
10	14442 14443 14444 14445 14446 14447	MC- HA22P/125-4 MC- HA22P/160-4 MC- HA22P/190-4 MC- HAX22P/125-4 MC- HAX22P/160-4 MC- HAX22P/190-4 -----	1 pc 1 pc 1 pc 1 pc 1 pc 1 pc
20	60031	REFRIGERANT RECEIVER 7 LTR.	1 pc
1520	08579	SET-RUBBER PLATE INDIVIDUALLY ADDED	1 pc
2000		----- ASSEMBLY KITS -----	1 pc
2200	08139	SET-ANTI-VIBRATION PADS	1 pc
2999		----- ACCESSORIES -----	1 pc
3100	07302	OIL SEPARATOR OS-16	1 pc
3110	60015	HOLDING ANGLE F.OIL SEPARATOR	1 pc
3300	81114 08612	SET-SAFETY VALVE (28BAR) FOR GVN REFRIGERANT RECEIVER POSITION NOT SHOWN SET-SAFETY VALVE (28BAR) FOR BWB REFRIGERANT RECEIVER POSITION NOT SHOWN	1 pc 1 pc
3400	81122	SET-HIGH-PRESS./SAFETY/GUARD	1 pc
3999	02279 02280 02281 02282 02283 02284	REFR.MACH.OIL SP46 / 1 LTR.CAN REFR.MACH.OIL SP46 / 5 LTR.CAN REFR.MACH.OIL SP46 /20 LTR.CAN NOT SHOWN ONLY FOR R22-COMPRESSORS ! REFR.MACH.OIL SE55 / 1 LTR.CAN REFR.MACH.OIL SE55 / 5 LTR.CAN REFR.MACH.OIL SE55 /10 LTR.CAN NOT SHOWN ONLY FOR X-COMPRESSORS !	1 pc 1 pc 1 pc 1 pc 1 pc 1 pc