

Spare part list for SHGX22e/190-4 SL (as of DK 076)

Position	Item No.	Description	Quantity
10	28044 28046 28045 28047	HG22e/190-4 HGX22e/190-4 HG22e/190-4 S HGX22e/190-4 S -----	1 pc 1 pc 1 pc 1 pc
20	60028	REFRIGERANT RECEIVER 8 LTR.	1 pc
22	51301 05369	SEAL RING 19,5x16,5x1,5 (f.1") FOR GVN REFRIGERANT RECEIVER SEAL RING 19,1x15,8x1,5 FOR BWB REFRIGERANT RECEIVER	1 pc 1 pc
23	51307	LOCKING SCREW 1/2" NPTF	1 pc
30	07119 70468	AIR-COOLED CONDENSOR UP TO DESIGN KEY 075 COND.NOT AVAILABLE ANYMORE REPLACED BY POS. 30+50+2100, DESIGN KEY 076 AIR-COOLED CONDEN.4RR/26RH/11K AS OF DESIGN KEY 076	1 pc 1 pc
50	50054 52161	BASE PLATE UP TO DESIGN KEY 075 NOT AVAILABLE ANYMORE/INACTIVE BASE PLATE AS OF DESIGN KEY 076	1 pc 1 pc
1520	08579	SET-RUBBER PLATE	1 pc
2000	80325	----- ASSEMBLY KITS ----- SET-HOLDING ANGLE	1 pc 1 pc
2024	82296	SET-SHUT-OFF VALVE 5/8"/SOLD.	1 pc
2025	81399	SET-SIGHT GLASS	1 pc
2030	82302	SET-O-RINGS	1 pc
2100	80332 82222	SET-VENTILAT.CPL.ø500 230V AC UP TO DESIGN KEY 075 SET-VENTILAT.CPL.ø450 230V AC AS OF DESIGN KEY 076	1 pc 1 pc
2200	81489	SET-ANTI-VIBRATION PADS	1 pc
2999		----- ACCESSORIES -----	1 pc
3100	81116	SET-OIL SEPARATOR OS-16	1 pc
3300	81114 08612	SET-SAFETY VALVE (28BAR) FOR GVN REFRIGERANT RECEIVER SET-SAFETY VALVE (28BAR) NOT AVAILABLE ANYMORE/INACTIVE FOR BWB REFRIGERANT RECEIVER	1 pc 1 pc
3400	81122	SET-HIGH-PRESS./SAFETY/GUARD +LOW PRESSURE CONTROLLER	1 pc
3500	81140	SET-OIL PRESS. SAFETY SW. MP55	1 pc
3600	80937	SET-SPEED CONTROLLER XGE-4C	1 pc
3999	02524 02525 02520 02521 02522	OIL BOCKLub A46 / 1 LTR.CAN OIL BOCKLub A46 / 5 LTR.CAN NOT SHOWN ONLY FOR R22-COMPRESSORS ! OIL BOCKLub E55 / 1 LTR.CAN OIL BOCKLub E55 / 5 LTR.CAN OIL BOCKLub E55 / 10 LTR.CAN NOT SHOWN ONLY FOR X-COMPRESSORS !	1 pc 1 pc 1 pc 1 pc 1 pc